
**LG CHEM E66A** 

Overview Batemo Cell Cell Data Cell Report

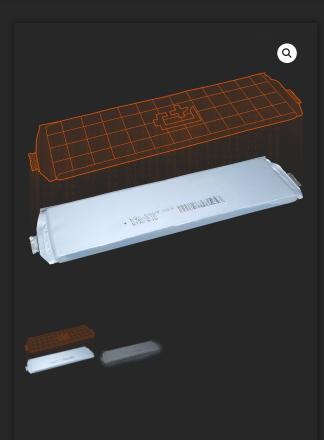

Batemo Cell Library

# LG CHEM E66A

The Batemo Cell of the lithium-ion battery cell LG Chem E66A is a high-precision, physical battery model with global validity. As a digital twin it seamlessly integrates into your research, development and battery analytics by basing your decisions on simulations.

GET REPORT

GET MODEL

Get a battery model for precise simulations, extensive measurement data and a detailed cell report of the LG Chem E66A.

Cell Origin	extracted from Porsche Tay- can (2020)
Cell Format	pouch
Dimensions	350 x 104 x 11.7 mm
Weight	897.0 g
Capacity [definition]	nominal 65.0 Ah C/10 63.5 Ah
Current [definition]	continuous 121 A peak 297 A
Energy [definition]	C/10 232.2 Wh
Power [definition]	continuous 0.41 kW peak 1.04 kW
Energy Density [definition]	gravimetric 259 Wh/kg volumetric 648 Wh/l
Power Density [definition]	gravimetric 1.16 kW/kg volumetric 2.90 kW/l

The Batemo Cell of the lithium-ion battery cell LG Chem E66A is a high-precision, physical cell model with global validity. As a digital twin it seamlessly integrates into your research, development and battery analytics by basing your decisions on simulations. See the details to learn more about the features and capabilities of the Batemo Cell.

Batemo Cell Version 1.201

Release Date November 01, 2020

Batemo demonstrates the accuracy and validity of the Batemo cell by comparing battery simulation and measurement data in the range given below. Validation is extensive, experimental characterization covers the total operational area of the cell: At low and high temperatures, up to the maximal current and in the whole state of charge range.

State of Charge Range

O ... 100%

Current Range
[definition]

Voltage Range

2.5 ... 4.2 V

Temperature Range -20 ... 60 °C

Moreover, the Batemo Cell validation is fully transparent. The Batemo Cell Data contains the raw measurement and simulation data. For all experiments the voltage, temperature, power and energy accuracies are calculated. This allows straight-forward evaluation and analysis of the Batemo Cell validity. The graphs show a selection of characteristic data of the cell LG Chem E66A to evaluate the cell performance.

#### **Discharge Characteristics**

# Pulse Characteristics

- Discharge Characteristics: The electrical and thermal discharge behavior is strongly nonlinear.
- Pulse Characteristics: The shape of different current pulses changes strongly.
- Energy Characteristics: The graph visualizes how much energy the cell can deliver when operated at different powers.
- Power Characteristics: The more power the cell supplies, the shorter it can deliver the power.
- Thermal Characteristics: The thermal losses heat up the cell the more, the higher the depleted power is.

[show experiment definitions]

## **Energy Characteristics**

How much energy can it deliver?

#### **Power Characteristics**

How long can it deliver the power?

#### **Thermal Characteristics**

How hot does it get?

The mean accuracies give an overview of the Batemo Cell accuracy. Therefore, the root mean square of the difference between the measurement and simulation result is derived for the voltage, the temperature, the energy and the power. Relative numbers relate the accuracy to the respective absolute value.

Mean Voltage Accuracy	0.029 V	0.9 %
Mean Temperature Accuracy	1.1 K	1.4 %
Mean Power Accuracy	2.89 W	0.8 %
Mean Energy Accuracy	3.760 Wh	2.6 %

The Batemo Cell precisely describes all aspects of the cell. It is the perfect tool for battery system development.

## **BATEMO CELL DATA**

Batemo offers an extensive, experimental characterization of the lithium-ion battery cell LG Chem E66A. The data contains measurement results in the total operational area of the cell. The descriptions and graphs below explain and show the available measurements. The Batemo Cell Viewer allows easy and fast analysis, evaluation and comparison of the data. See the details to learn more.

#### **Constant Currents**

The cell is discharged from 100% SOC or charged from 0% SOC with different constant currents at different ambient temperatures. The thermal boundary condition is free convection. The measurement stops when reaching either the voltage of 2.5V or 4.2V or the surface temperature of 60°C. The graph shows for which ambient temperatures and charging and discharging constant currents measurements are available.

## **Pulse Currents**

The cell is discharged from 100% SOC or charged from 0% SOC with current pulses followed by no-load phases at different ambient temperatures. The thermal boundary condition is free convection. The measurement stops when reaching either the voltage of 2.5V or 4.2V or the surface temperature of 60°C. The graph shows for which ambient temperatures and pulse currents measurements are available.

### **Power Profiles**

The cell delivers a typical power profile from 100% SOC at different ambient temperatures. The thermal boundary condition is free convection. The measurement stops when reaching either the voltage of 2.5V or the surface temperature of 60°C. The table summarizes for which ambient temperatures the profile is available.

-	ambient emperature	Available
-2	20 °C	
0	°C	
2	5 °C	
4	0 °C	

## **BATEMO CELL REPORT**

Batemo offers a detailed report of the lithium-ion battery cell LG Chem E66A. The report covers all important aspects about the cell. This information greatly helps you to further evaluate and compare the cell. It is a profound basis for your decisions concerning your battery system design. See the details to learn more.

Performance Overview

Cell Exterior

Cell Interior	
Safety Features	
Electrode Microstructure and Material	

About Batemo Contact Legal Notice Privacy Policy

Copyright © 2022 - Batemo GmbH